


# Modular Down Flow Ceiling & Unidirectional Cross Flow Systems

---

All Isolation Systems, Inc. Cleanroom and Process Down/Cross Flow Systems are available in standard sizes and are easily customized to fit any design configuration. Please consult with us for further information on the wide variety of system types offered by Isolation Systems.

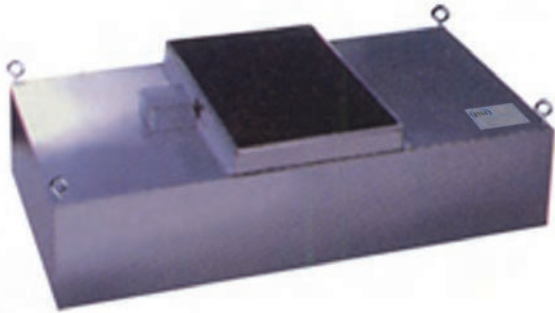

Isolation Systems, Inc. Sales, Design & Engineering Staff will work with our customers from project inception through final manufacture. Our factory trained technicians will work with you during system installation. Custom designed process specific engineered systems are our specialty.

We fully guarantee that our products construction ensures product durability and long lasting aesthetic appeal within the most demanding environments.

Isolation Systems, Inc. is dedicated to providing a full spectrum of Airborne Contamination Control, Containment, and Extraction technologies for both personnel and product protection solutions.

*Thank you for considering Isolation Systems, Inc. for your next project.*



Isolation Systems Inc.

P.O. Box 536 • Wading River, NY 11792  
www.IsolationSystemsInc.com  
sales@isolationsystemsinc.com  
Main Tel/FAX : 888-764-7775



# Modular Down Flow Ceiling & Unidirectional Cross Flow Systems

**Isolation Systems, Inc.** Designs, Engineers and Manufactures the most versatile lines of Modular Down Flow Ceiling Suspended and Horizontal Cross Flow systems in the industry. Our systems are designed and engineered to meet all existing Federal and ISO standards for Unidirectional (Laminar Flow) applications. These modular pre-fabricated systems can be enclosed by Clear Flexible PVC in strip or solid curtain wall. ISI offers three types of Clear Anodize Aluminum curtain suspension systems: Flat Wall, In-Jamb or Grid Suspended. These systems are easy release clamp to bead attachment providing simple curtain maintenance and replacement. Our Ceiling Grid component suspension systems are Clear Anodized Extruded Aluminum or Stainless Steel with pre-gasketed T-Grid & Wall Bar. All section connections are interlocking and rigid. All ceiling systems are self-supporting by design. Filtration systems are available in a wide variety of sizes that will conform to all coverage and classification requirements.



All systems can be engineered for single-pass air discharge or re-circulating air flows. **Isolation Systems** also offers modular wall mounted high volume HEPA Filtered Exhaust systems to convert your enclosure for Negative pressure applications for use in Particulate or Powder extraction. Standard Lighting is Integral Flush Mounted. All lighting provided with systems are sealed per enclosure classification where used.



**Isolation Systems Inc.**

P.O. Box 536 • Wading River, NY 11792  
www.IsolationSystemsInc.com  
sales@isolationssystemsincc.com  
Main Tel/FAX : 888-764-7775